

## Change Scanfob 2002 PIN Code

Scan BEGIN, then SET PIN, followed by the desired PIN code.  
Complete the setup by scanning the END PIN barcode, followed by the END configuration barcode.

|         |  |   |  |
|---------|--|---|--|
| BEGIN   |  | 1 |  |
| SET PIN |  | 2 |  |
|         |  | 3 |  |
|         |  | 4 |  |
| 1       |  | 5 |  |
| 2       |  | 6 |  |
|         |  | 7 |  |
| 3       |  | 8 |  |
|         |  | 9 |  |
| 4       |  | 0 |  |
| 5       |  |   |  |

Sweep the laser in from the side to avoid the incorrect barcode

Then, sweep outwards before moving to the next digit

|         |  |
|---------|--|
| END PIN |  |
| END     |  |